


SADOWSKY BASS CONTROLS

Figure 1 Control Options

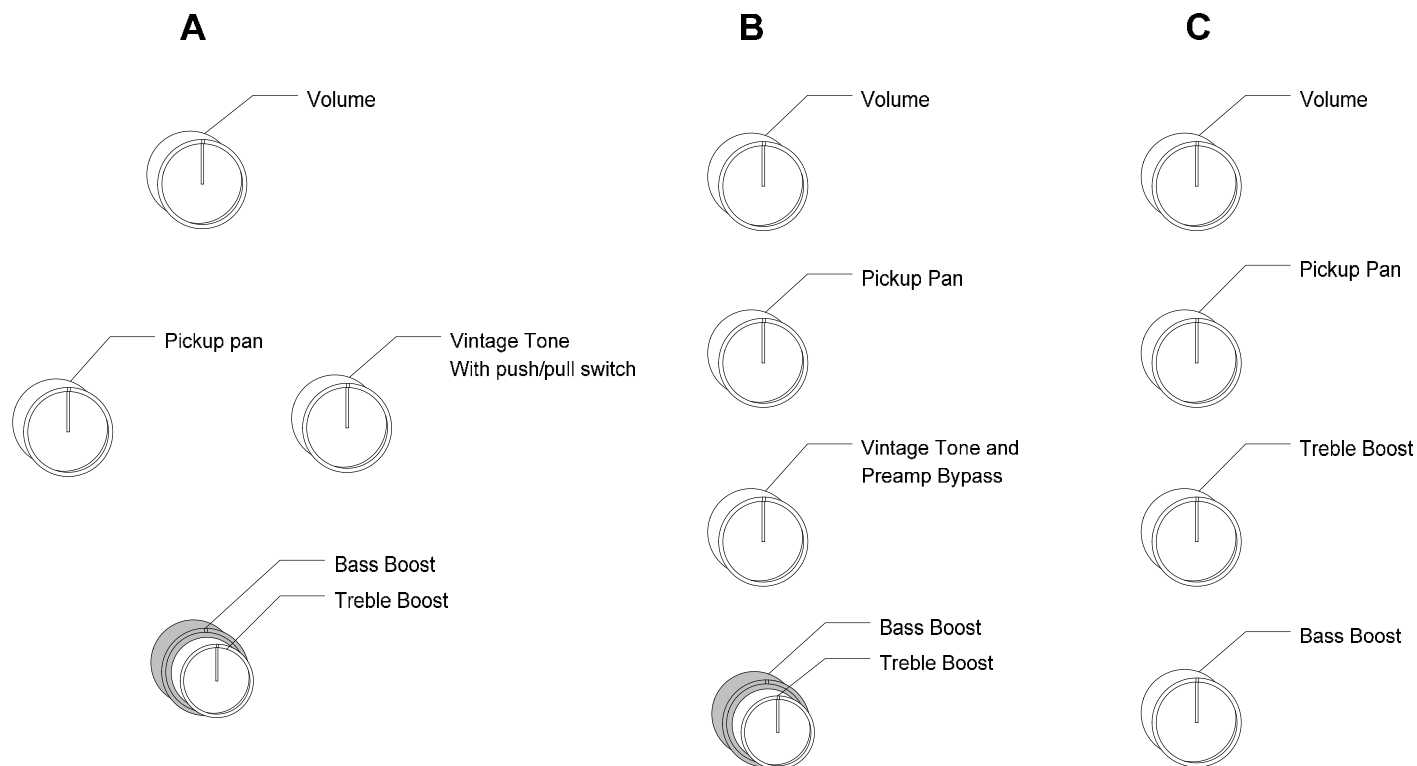

A Four controls in a diamond pattern with a preamp bypass push/pull switch on the vintage tone control.

B Four controls in line with a preamp bypass push/pull switch on the vintage tone control.

C Four controls in line with a preamp bypass push/pull switch on the bass boost control. No vintage tone control.

Features

Preamp is powered by a 9-volt alkaline battery (battery life approximately 6-12 months), which is switched on via the input jack. To preserve battery life, unplug cables when not in use. Flat response is achieved when bass and treble boost controls are set to "0" (fully counterclockwise) and vintage tone is set to "10" (fully clockwise). Adjust bass and treble controls; start with the controls fully counterclockwise. Setting bass and treble controls to "10" is not recommended. On all models (unless otherwise specified) the pickup pan control selects the bridge pickup when clockwise and the neck pickup when counterclockwise. When engaging the active/passive switch, there is an unavoidable electronic "pop" which occurs. If you use the switch while playing, please be sure to turn your volume control to "0" before engaging the switch.

Specifications

- ◆ Bass Boost Control: +13dB maximum boost @ 40 Hz (control fully clockwise)
- ◆ Treble Boost Control: +13dB maximum boost @ 4 kHz (control fully clockwise)
- ◆ Frequency Response: 5 Hz to 50 kHz
- ◆ Harmonic Distortion: 0.1% @ 1 kHz